




# Lab 03 Collin King

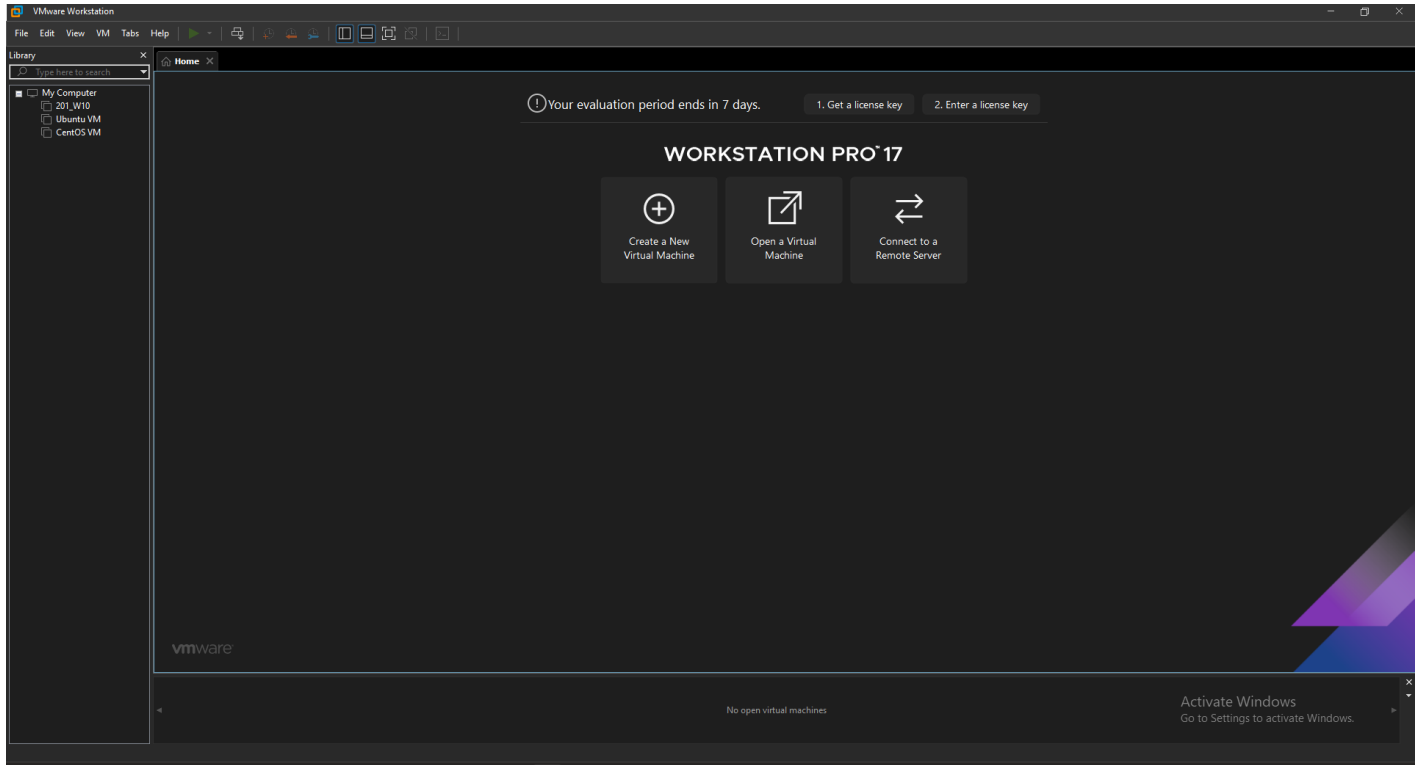


Open VMWare and select “Create a new virtual machine” button.

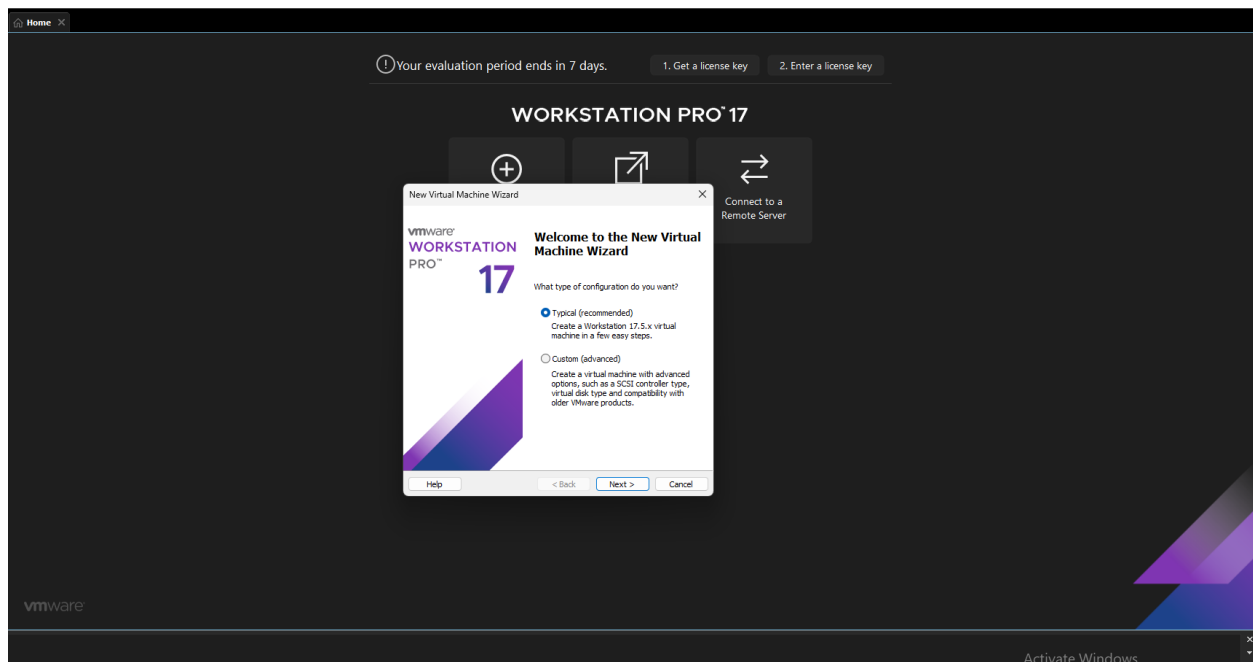


Keep the typical option selected and click next.

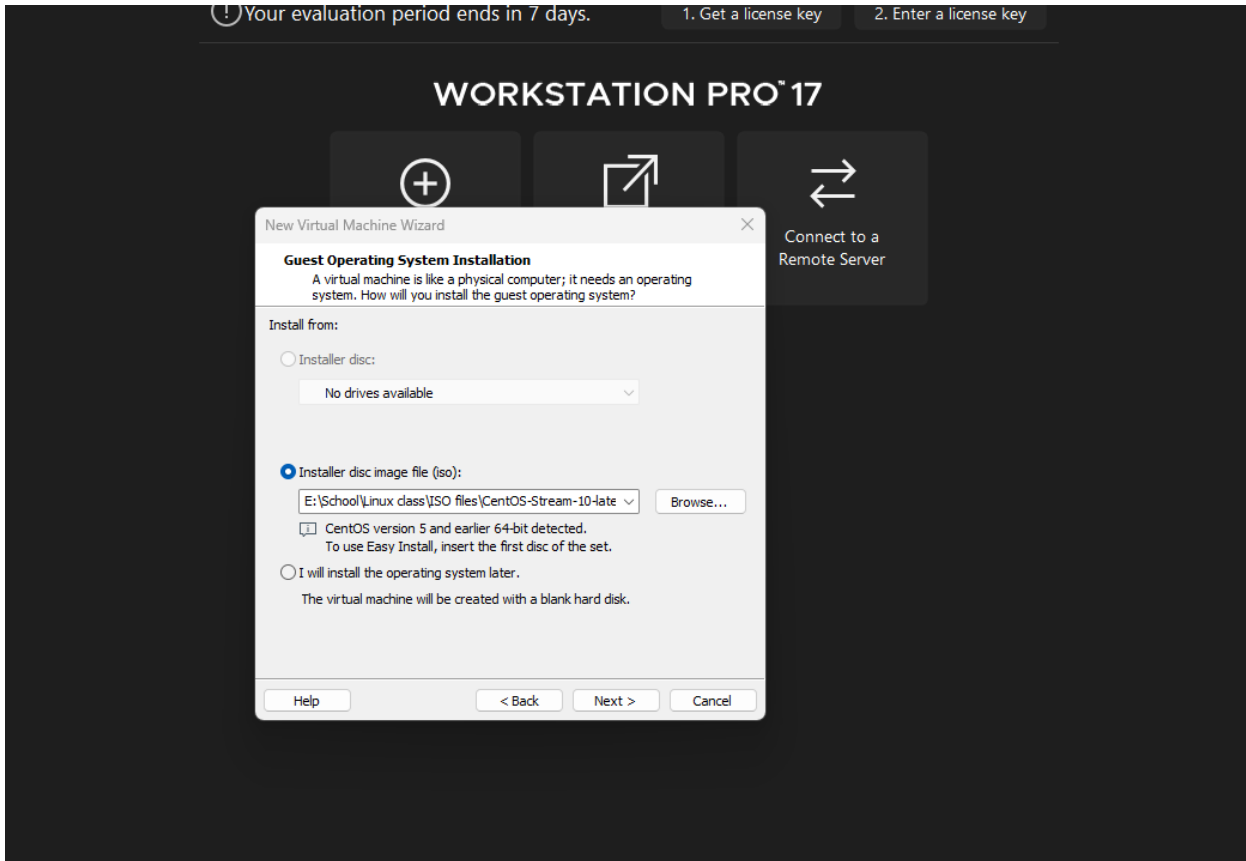


Select “Installer disc image file (iso)” then click browse. It’s a good idea to have any ISO files organized in a folder so they are easily accessible. This will open a file explorer for you to select the CentOS .ISO file on your system.

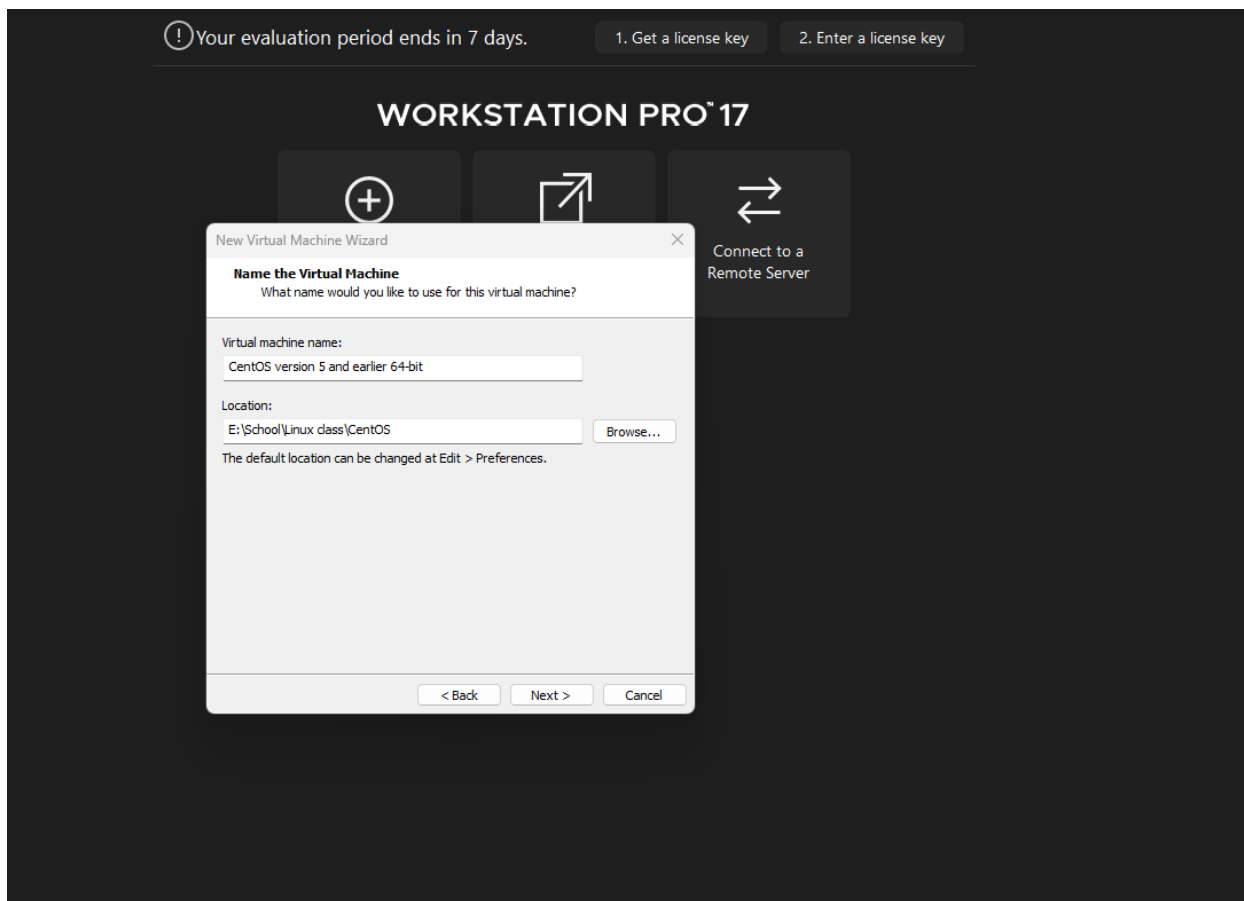


This screen allows you to type a name for your machine and select a new location by clicking the browse button to view your hard drive to install the machine. I've changed my location to keep all my VM files organized. After you've made the changes you've wanted too, click next.

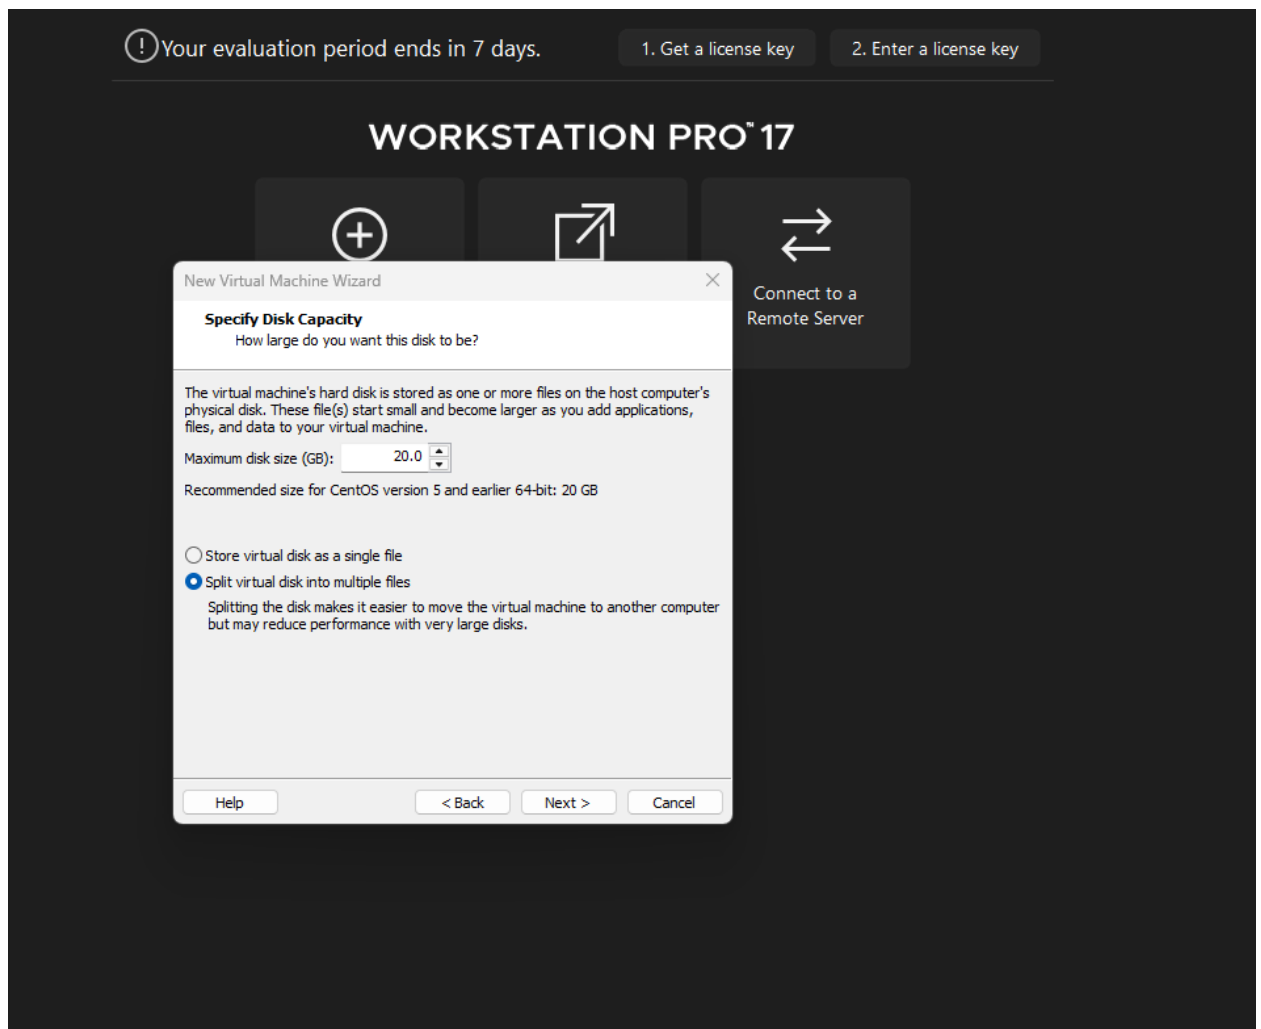


Leave the settings as is then click next.

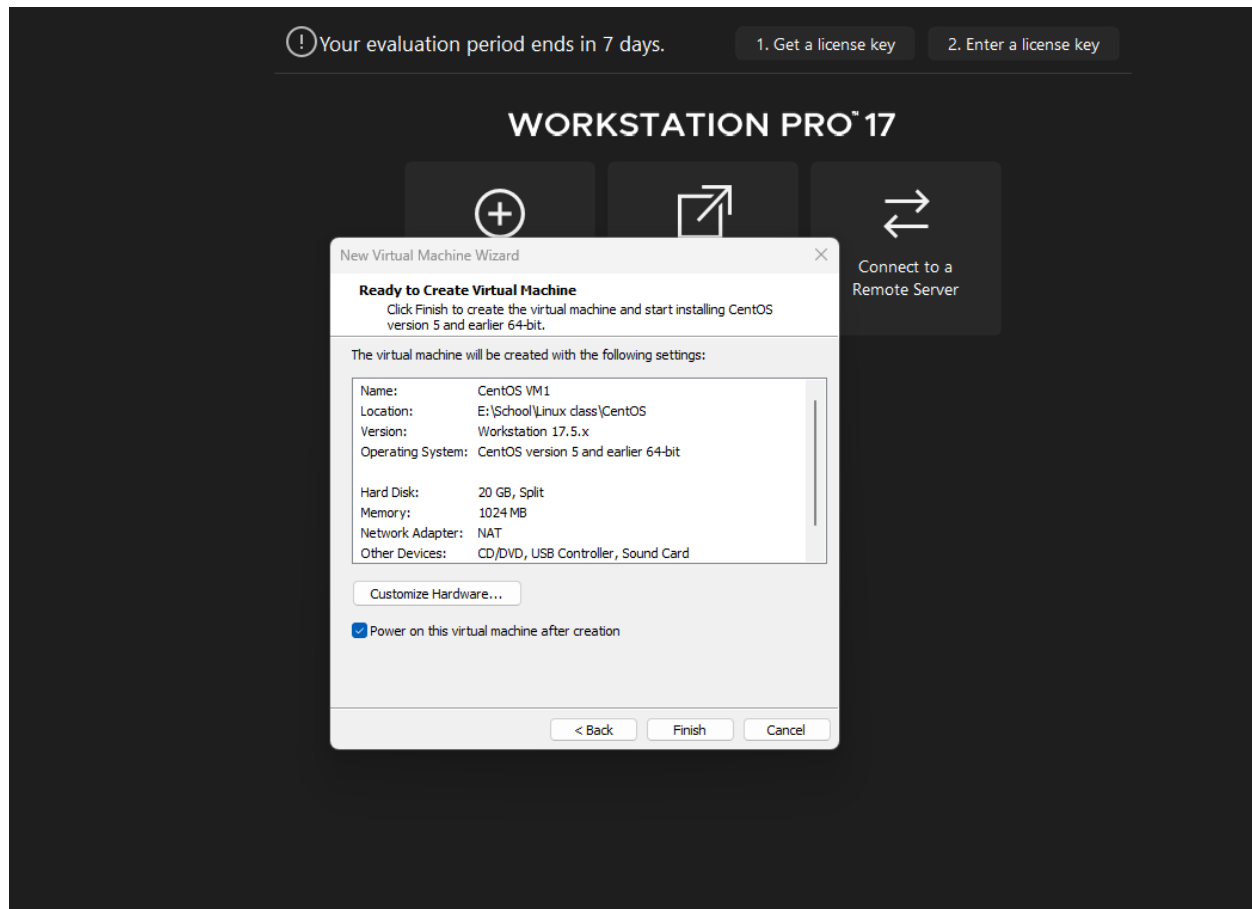


This is the hardware for your machine. Here you can see the default values of the memory and processor count. Select customize hardware.

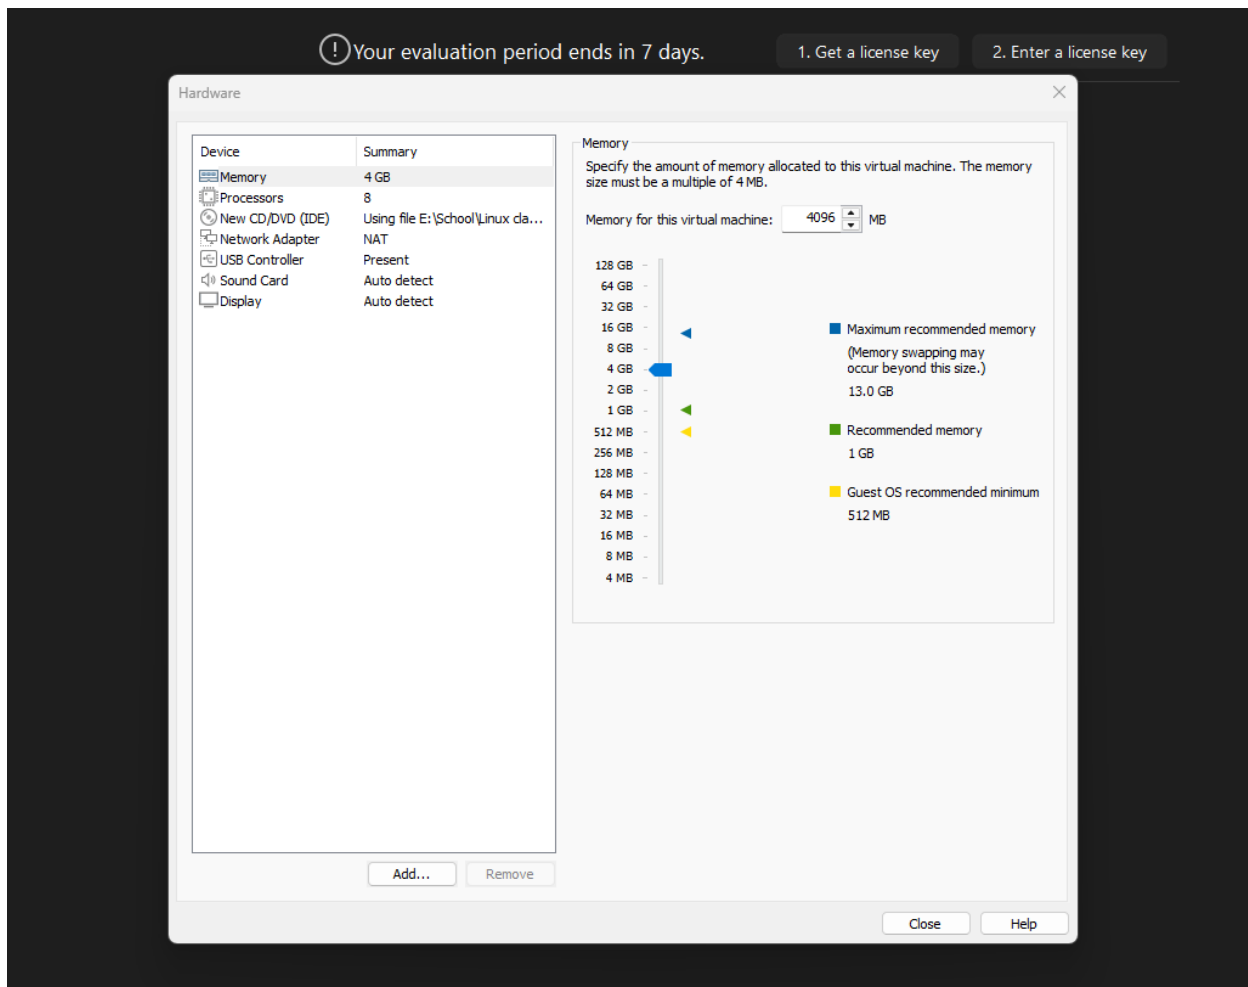

Here I've changed my memory to 4 GB and processor count to 8 accidentally, I changed it down to 6 after the screenshot. Processor count may not need to be changed as I'm testing to see if I see a decent performance change on the VM. 4GB of memory is probably overkill also, you can most likely get away with 2GB. You may not even need to change any of these values at all, it could be trial and error with performance. Make sure you have NAT with the network adapter so we can use the internet. After you're done with the hardware screen, click close, then it'll bring you to the first hardware screen, then click finish. Let the system boot up the installer.

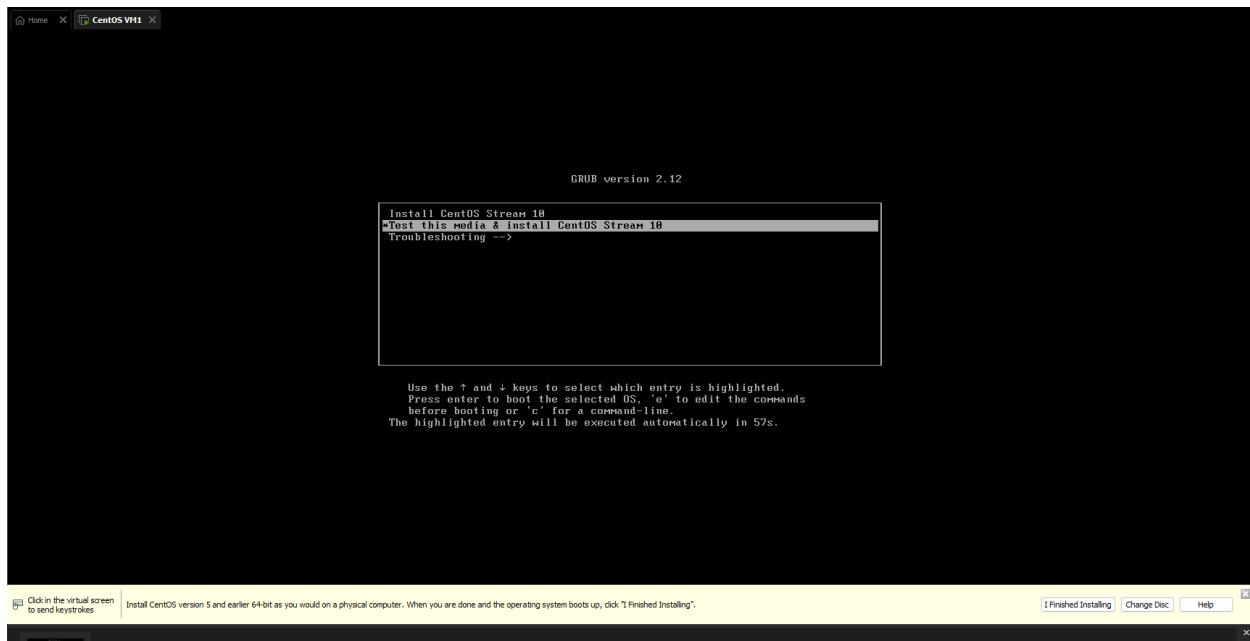


After the installer is booted, you'll be greeted with this screen, use the arrow keys to navigate the menu. Select “Install CentOS”.

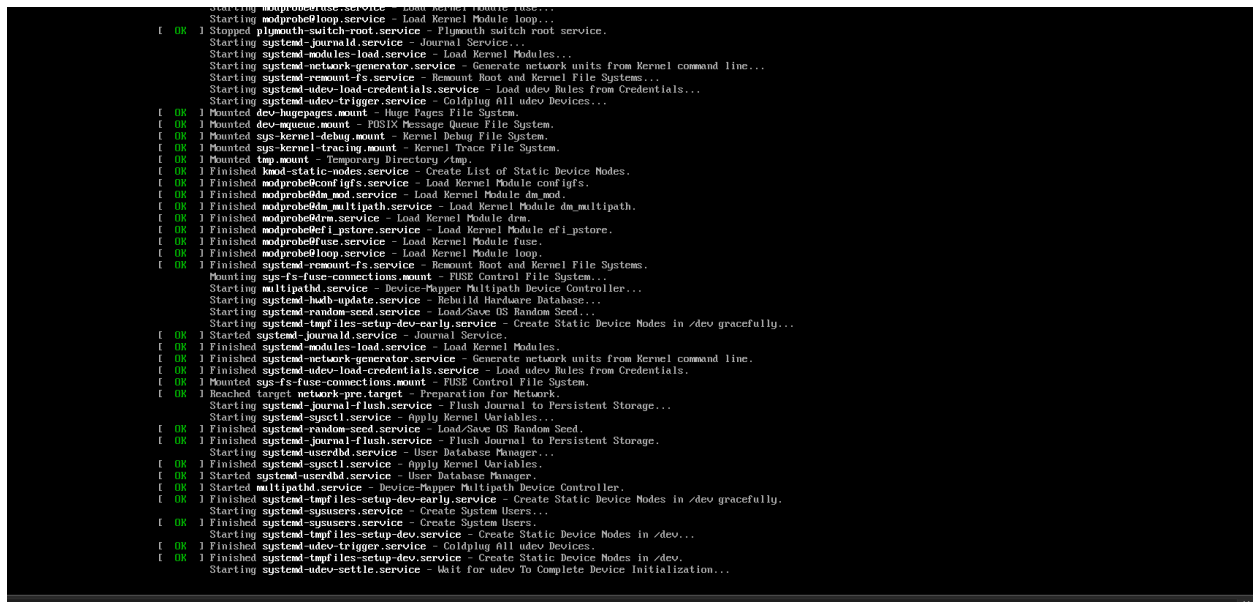


The system will start loading the OS installation, you will see this flash on the screen pretty quickly.



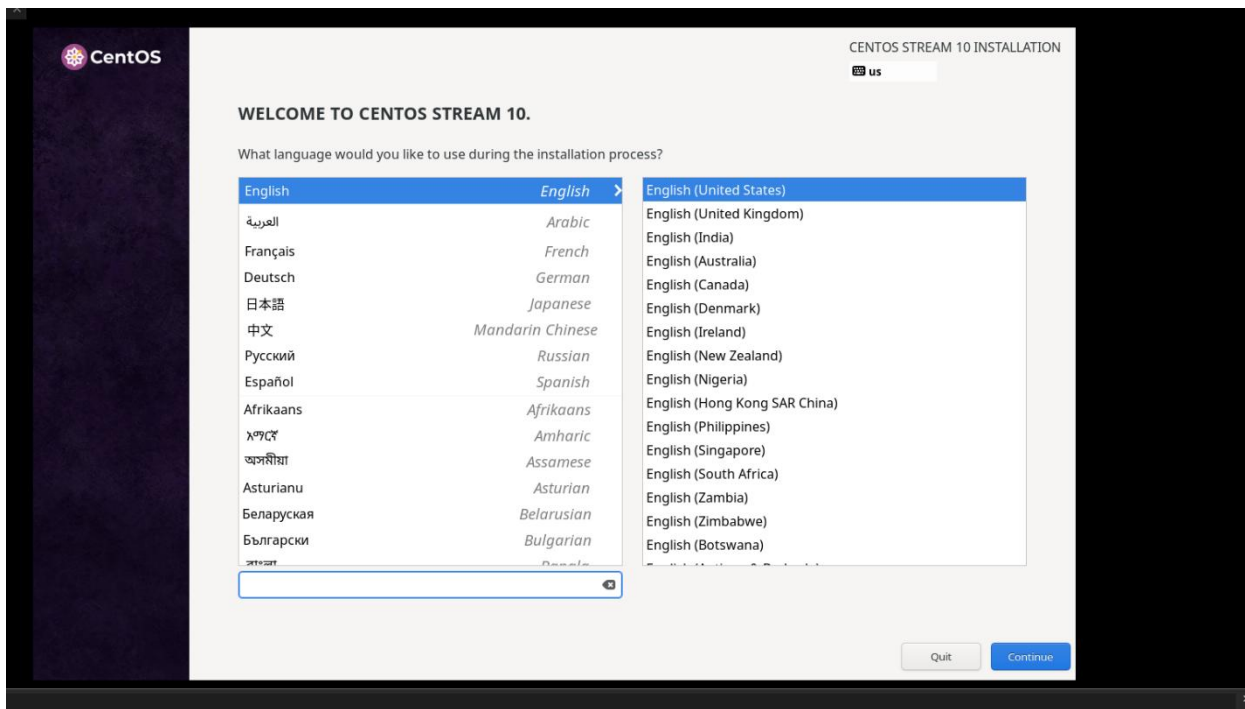


This will be the next screen you will see. Select the systems language you would like to use. Click continue at the bottom of the screen.

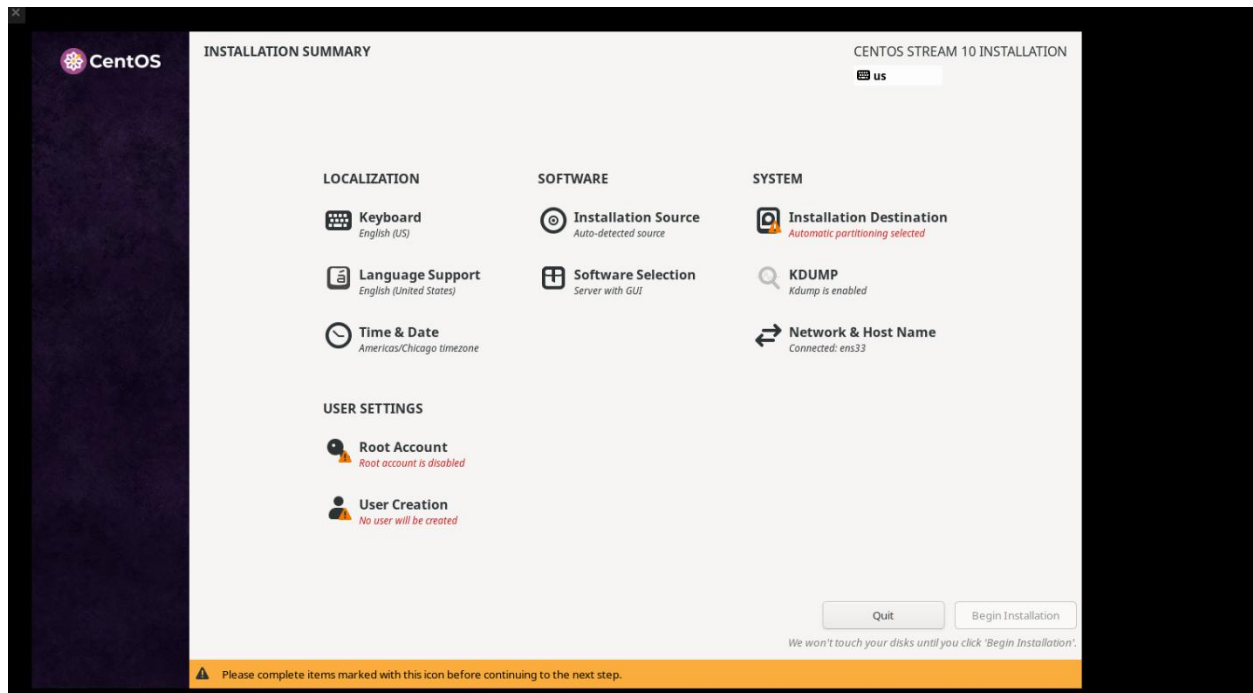

This is the installation summary. This allows you to easily find the options you want to customize for your installation. The first two options under localization are keyboard and language support. These allow you to have multiple layouts and languages if you wish to have them.


Click time & date under language support.

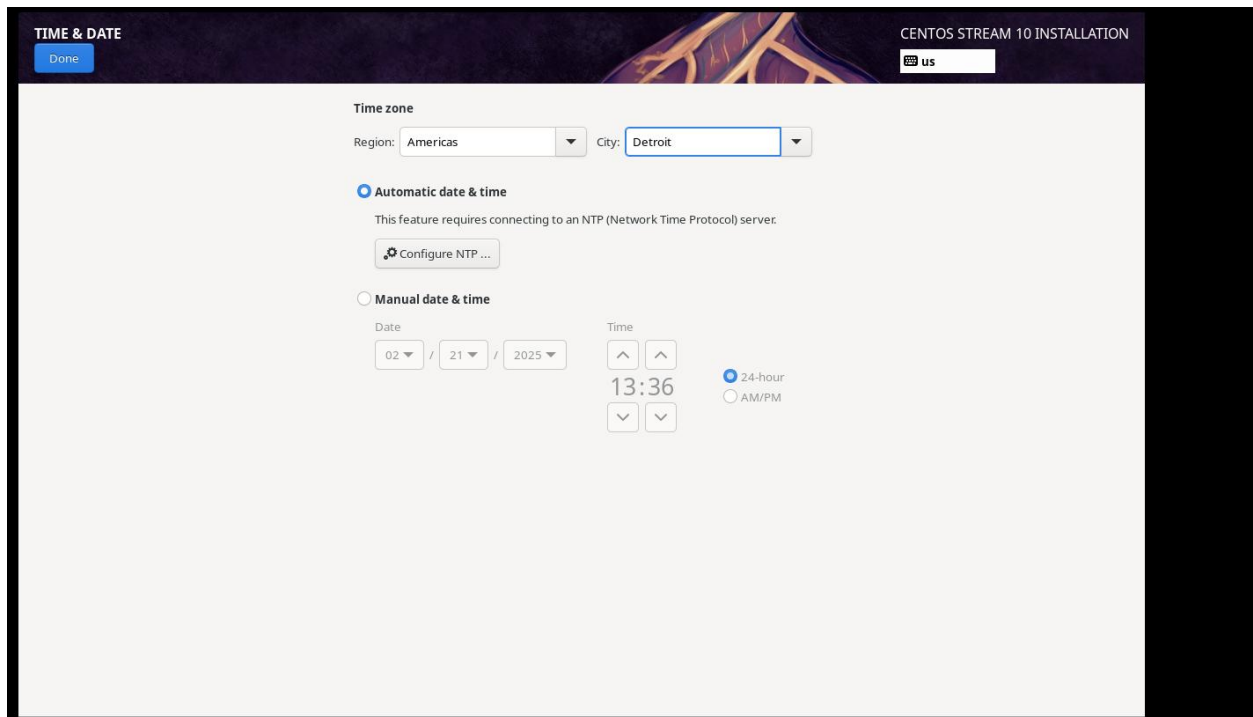


The screenshot shows the 'TIME & DATE' configuration window in the CENTOS STREAM 10 INSTALLATION environment. The window has a dark header with the title 'TIME & DATE' and a 'Done' button on the left, and 'CENTOS STREAM 10 INSTALLATION' with a language dropdown set to 'us' on the right. The main content area is light gray and contains the following elements:

- Time zone**: Two dropdown menus for 'Region' (set to 'Americas') and 'City' (set to 'Detroit').
- Automatic date & time**: A radio button that is selected. Below it, a note states 'This feature requires connecting to an NTP (Network Time Protocol) server:' followed by a 'Configure NTP ...' button.
- Manual date & time**: A radio button that is unselected. Below it, there are date and time input fields:
  - Date**: Three dropdown menus for month (02), day (21), and year (2025).
  - Time**: A digital clock display showing '13:36' with up/down arrows for each digit.
  - 24-hour / AM/PM**: Two radio buttons, with '24-hour' selected.


Here you can select Region or city. It saves a bunch of time to just type in the city instead of searching for it in the drop down menu. After selecting your region and city, click “Done” at the top left.

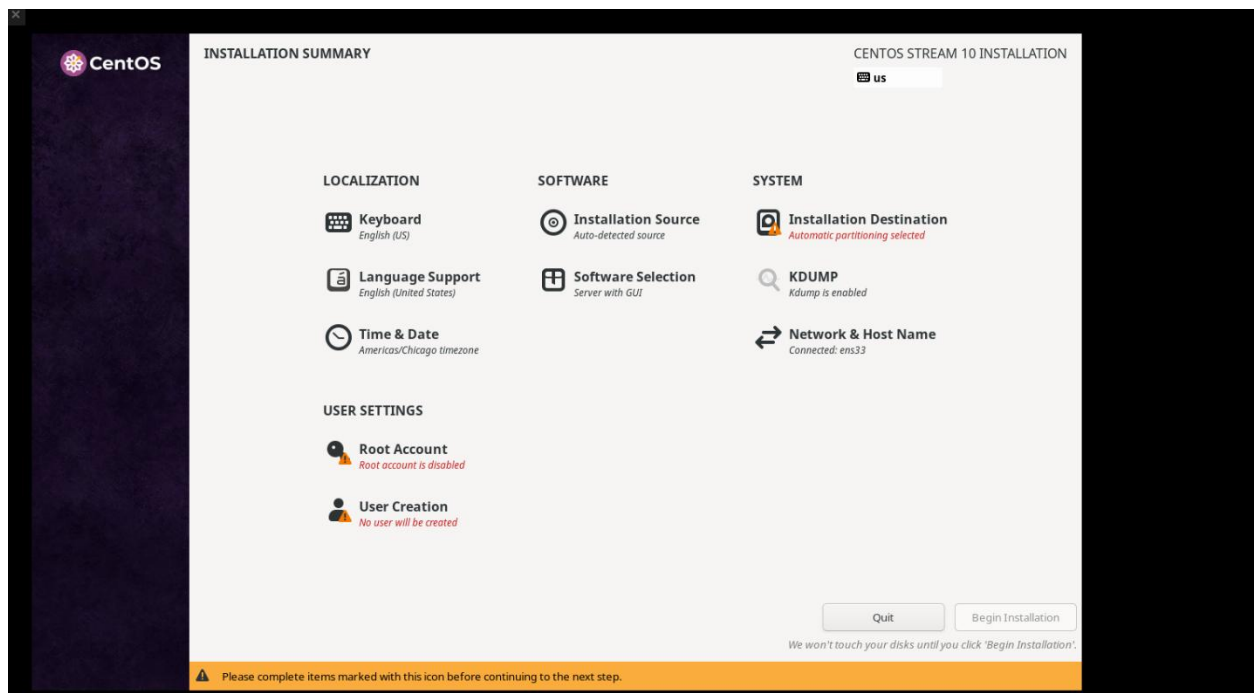


Select "Installation Destination" under system.

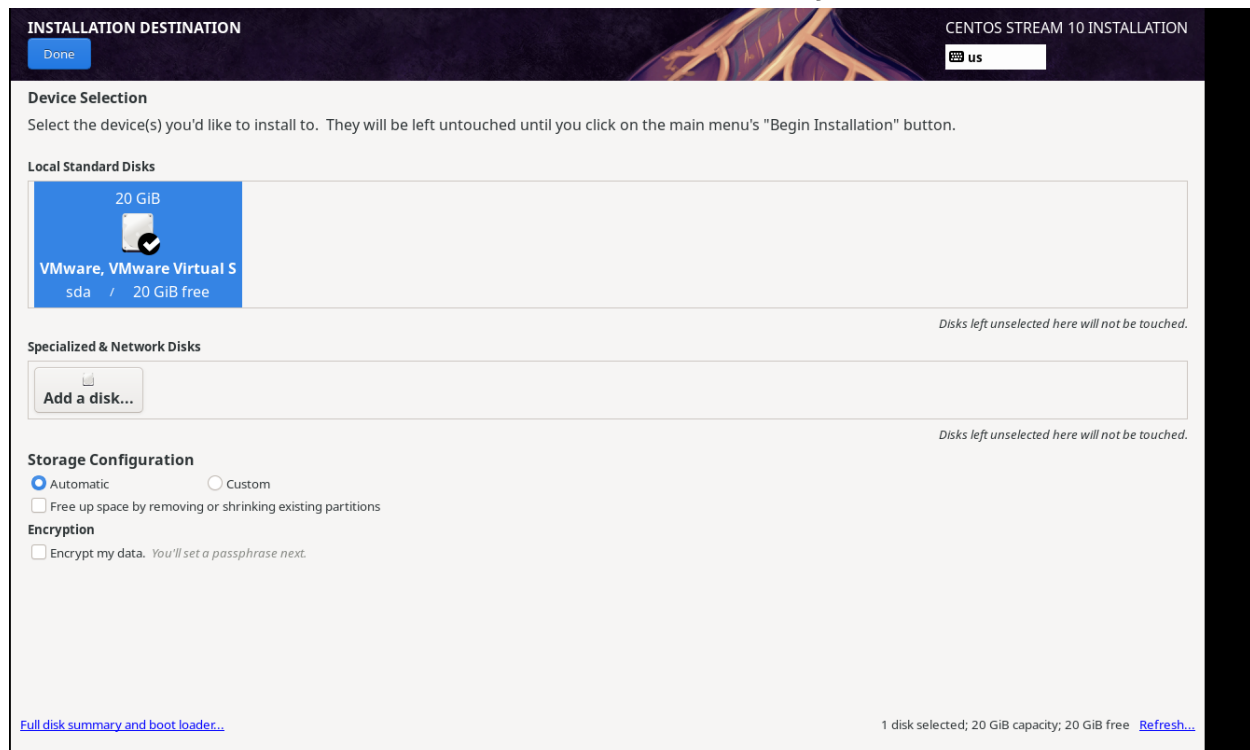


Here you can change any settings, and use encryption. Im not changing anything so ill just click "Done" at the top left.

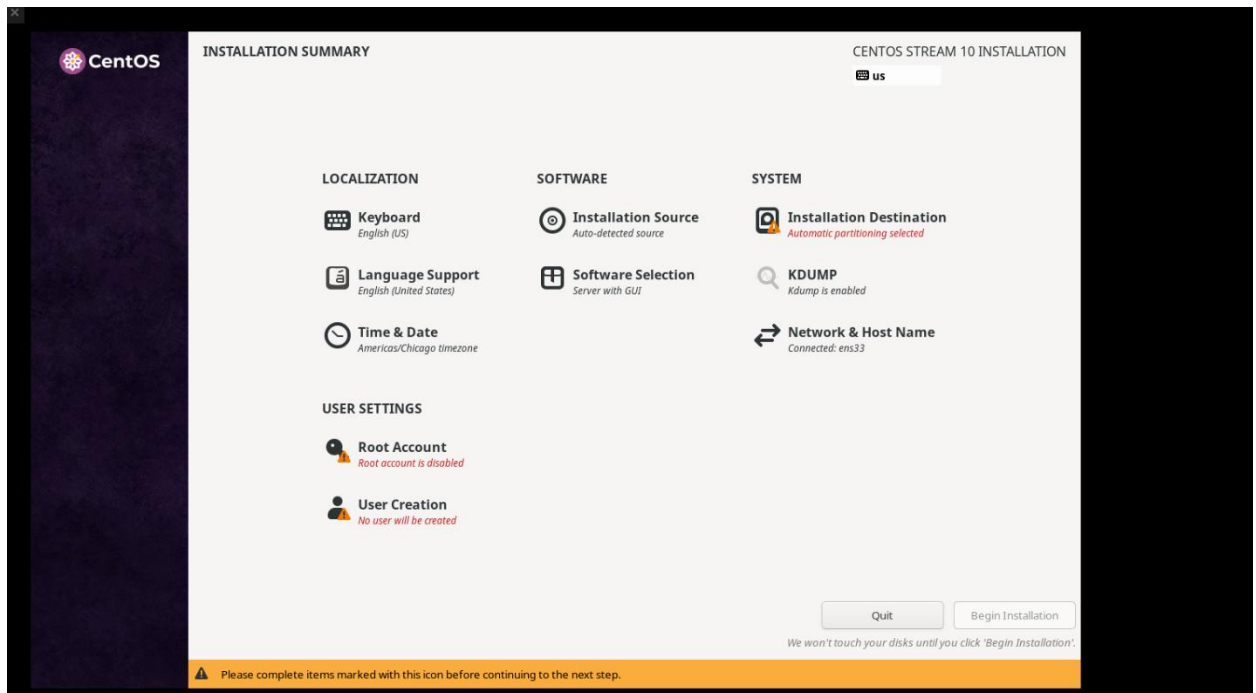


## Select “Network & Host Name”

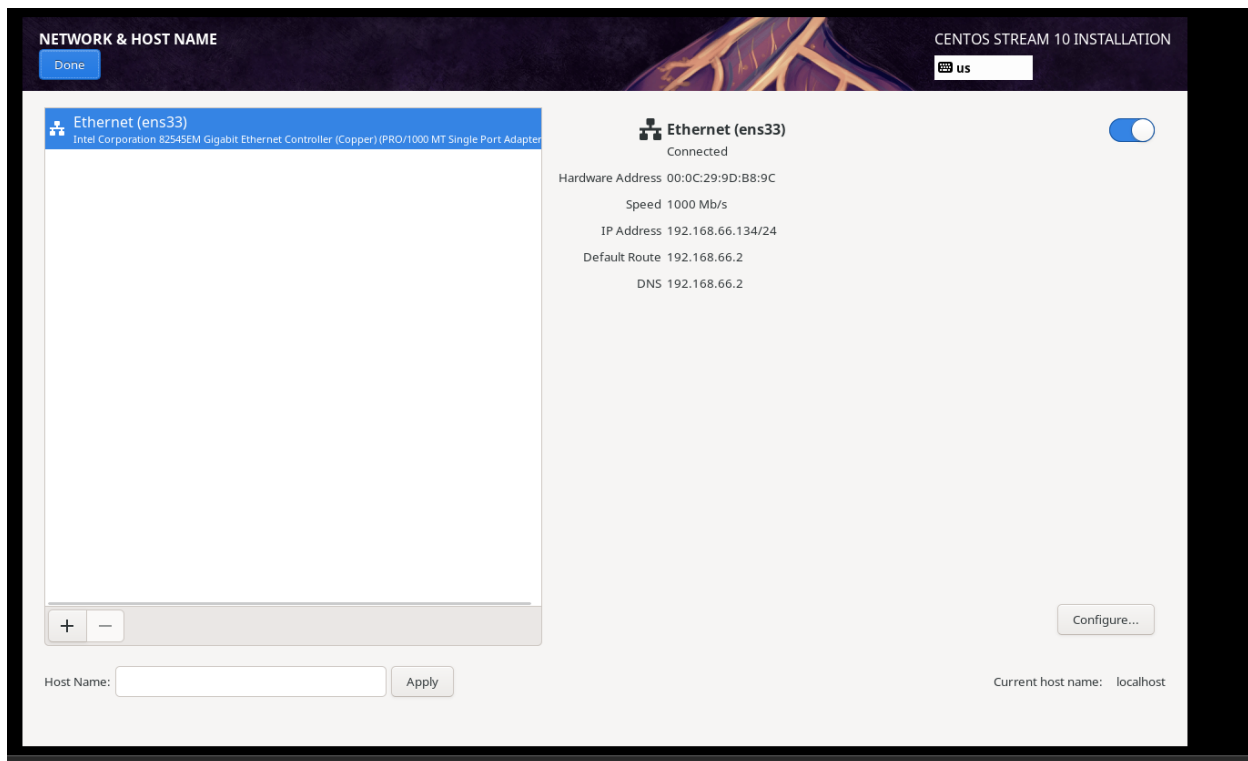


Here you can change any networking settings you feel like you need to change. I have nothing to change so ill just click “Done” at the top left.

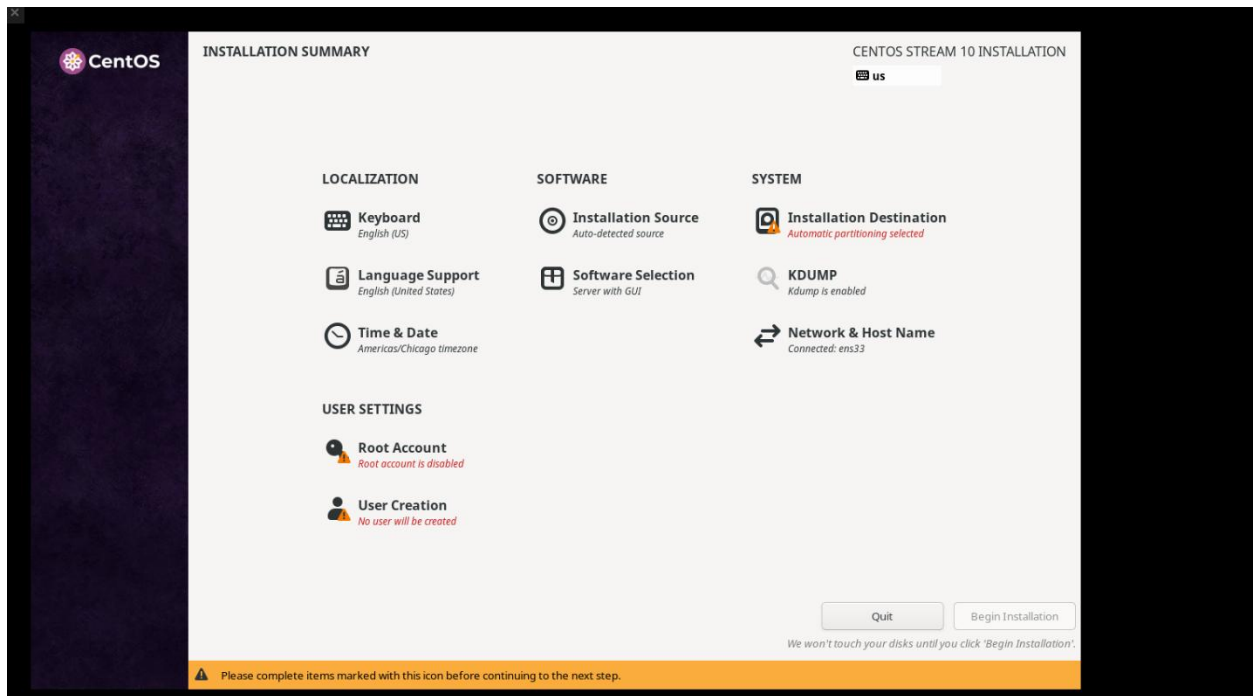

Select “Root account” under user settings.

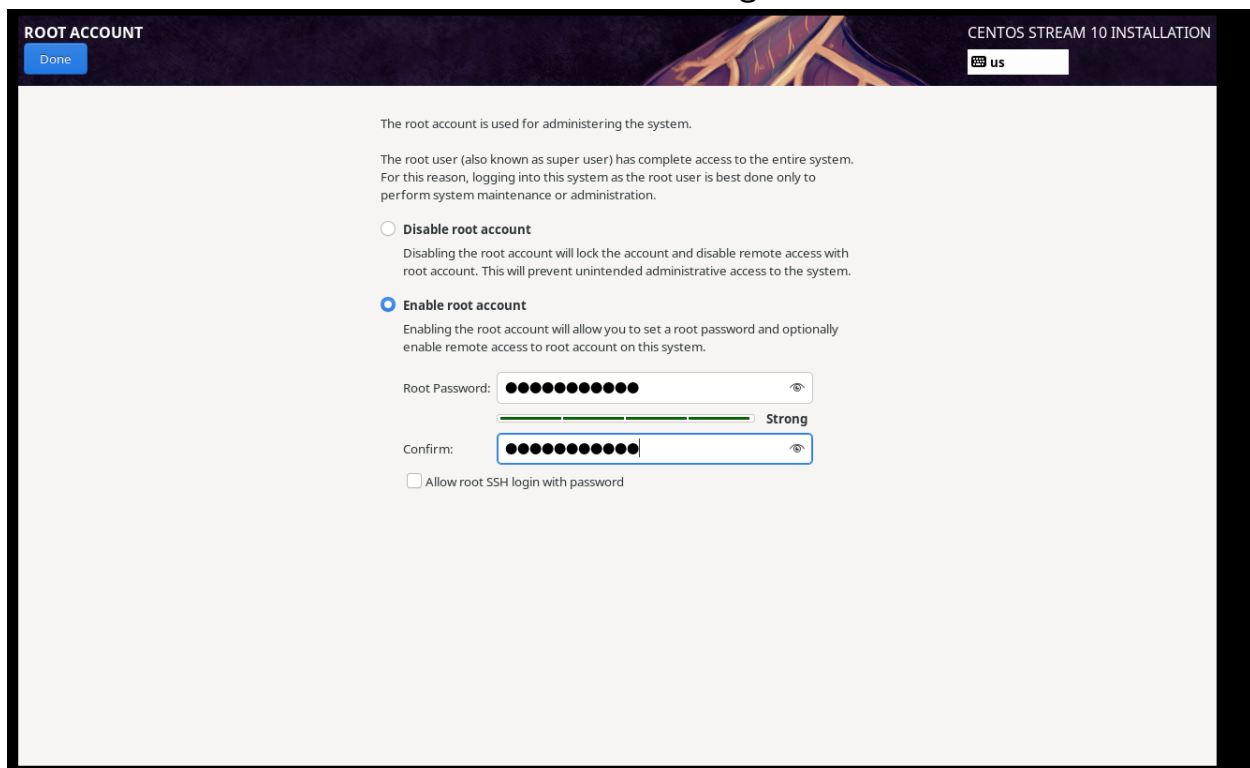

Select "Enable root account" then make a password for the root user. Do not forget this password. After making a root user, click “Done” at the top left.

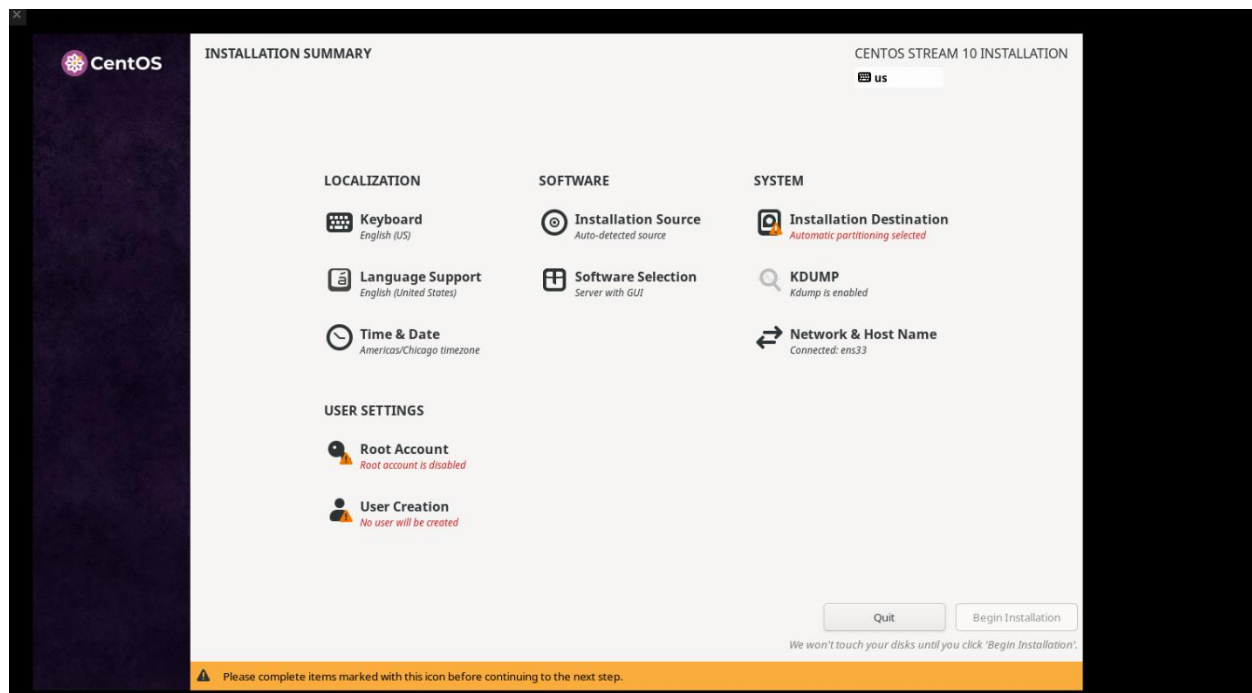

Now select “User creation” under user settings.

The image shows the 'CREATE USER' screen for CentOS Stream 10. The screen has a 'Done' button in the top left corner. The main form area contains the following fields and options: 'Full name' (text input), 'User name' (text input), 'Add administrative privileges to this user account (wheel group membership)' (checked checkbox), 'Require a password to use this account' (checked checkbox), 'Password' (password input field with a strength indicator showing 'empty password'), and 'Confirm password' (password input field). There is also an 'Advanced...' button at the bottom.

Here you can fill out the form to create a user account on the OS.

Full name: Collin King

User name: cking

### ADVANCED USER CONFIGURATION

Home directory: /home/cking

**User and Group IDs**

☐ Specify a user ID manually: 1000 — +

☐ Specify a group ID manually: 1000 — +

**Group Membership**

Add user to the following groups:

wheel


**Example:** wheel, my-team (1245), project-x (29935)

**Tip:** You may input a comma-separated list of group names and group IDs here. Groups that do not already exist will be created; specify their GID in parentheses.

Cancel Save Changes

If you would like to, you can click the “Advanced” option at the bottom of the form to create a custom home directory, set user and group IDs, and you can add a user to a group also. If you made any changes, click “Save Changes” then click “Done” at the top left of the screen. This will bring you back to the installation summary. Click “Begin installation” at the bottom right of the screen to start installing.




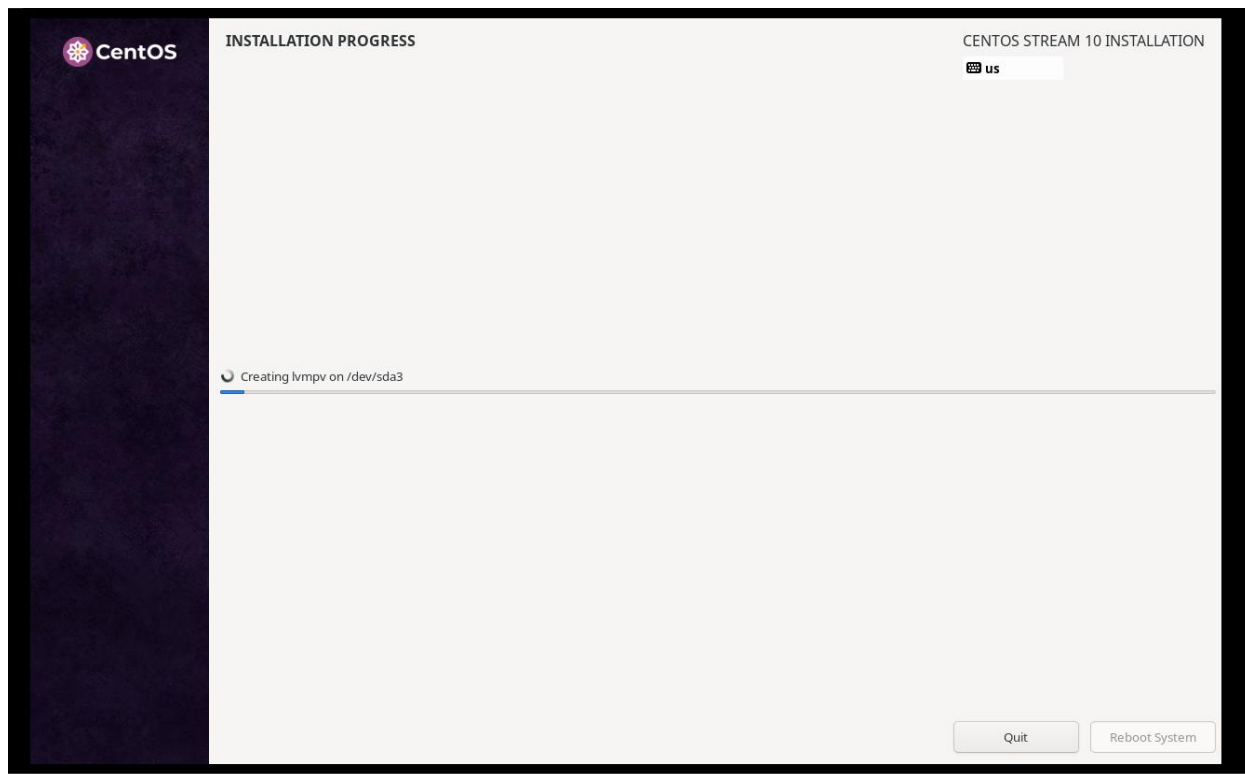


The installation will begin , this could take a little bit.




After the installation is finished, click “Reboot System” at the bottom right of the screen.

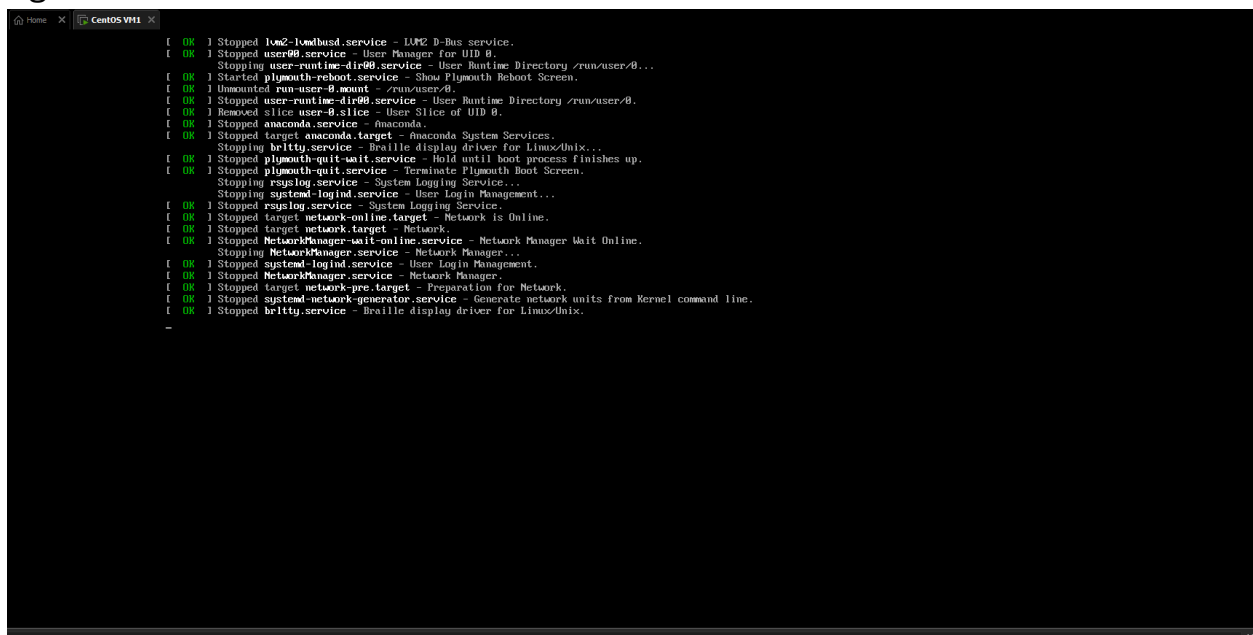


Let the system reboot.

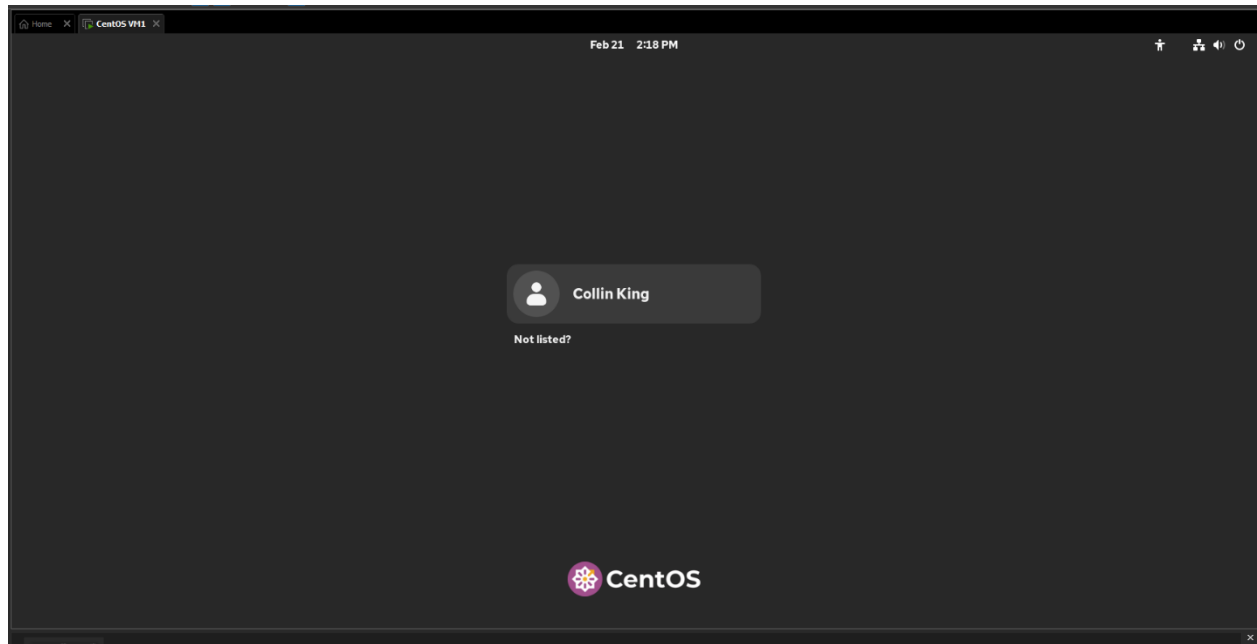


After the system reboots, select your user account, and log in.

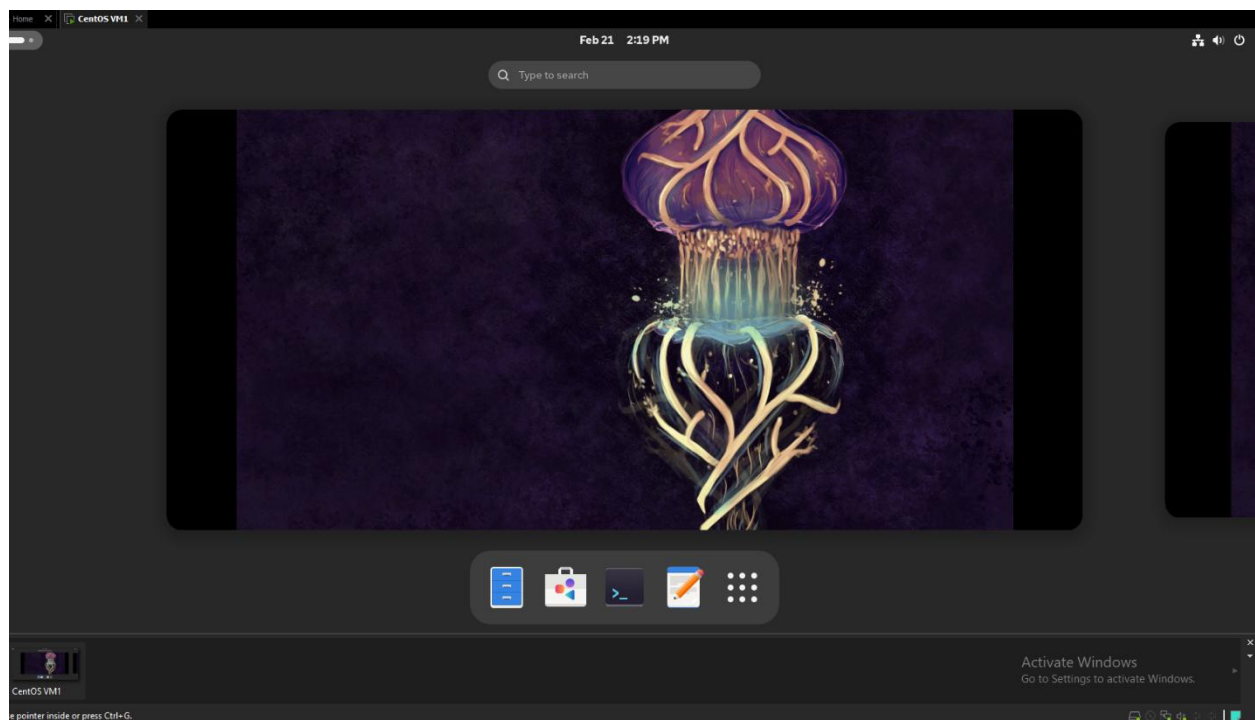


CentOS is now installed! We can view our settings by clicking “Show apps” at the right side of the bar at the bottom.

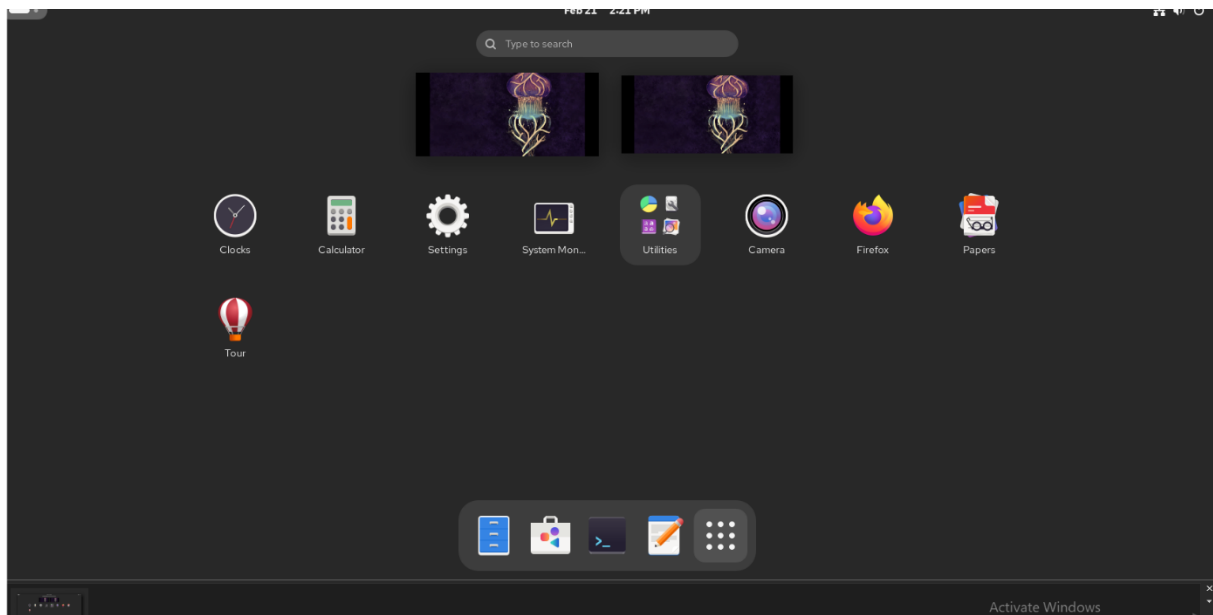


Click the “Settings” app , then the app will load and the OS will bring you to a desktop with the app opened.

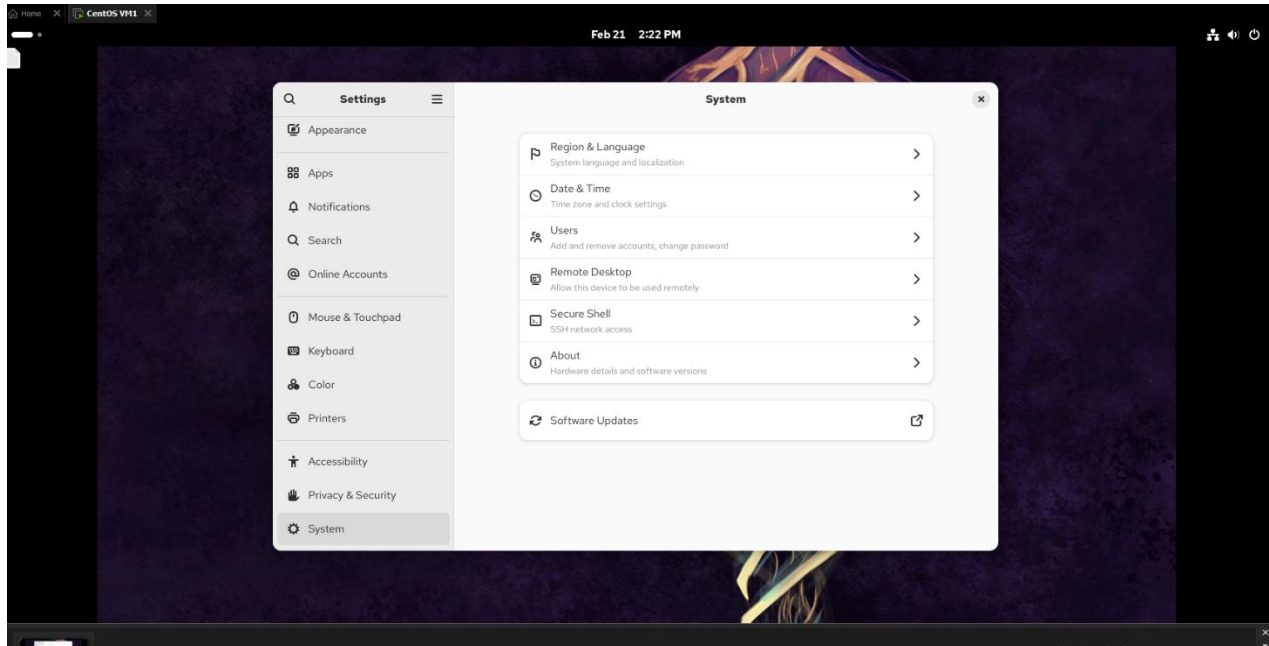

Scroll all the way down to “System” in the scroll menu on the left. Select “System”.

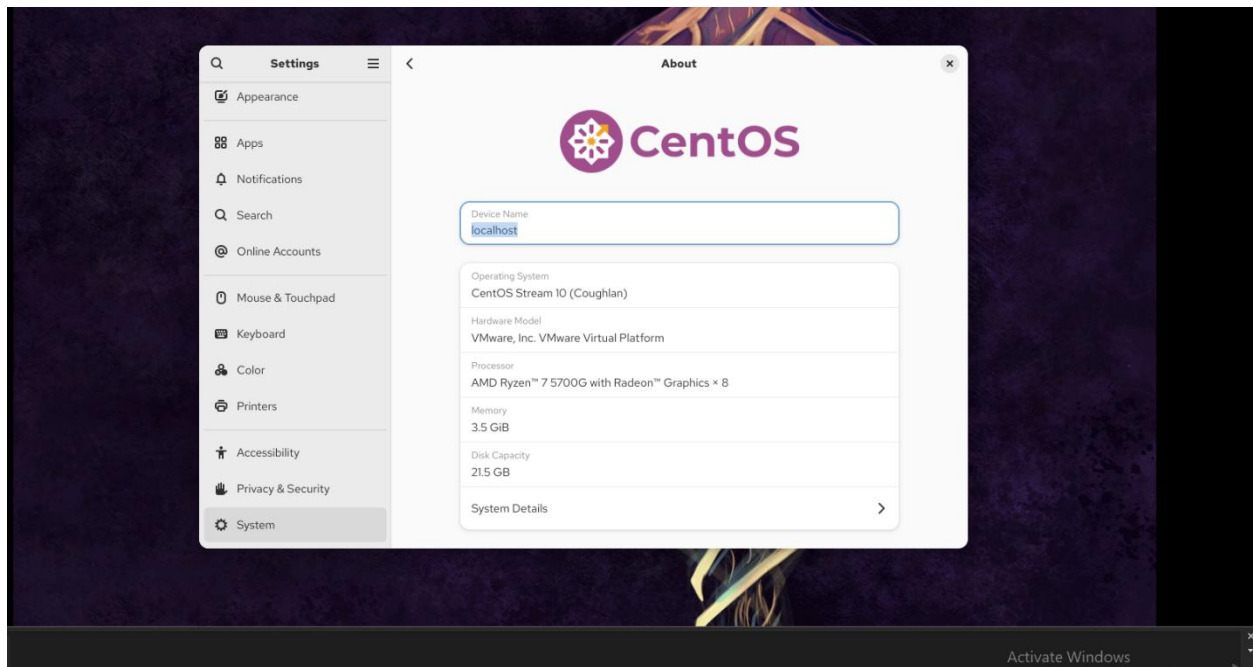

Here you can see your OS, Hardware model, processor, memory, and disk capacity. You can also set a Device name in the OS. Click “System Details” at the bottom of the screen.

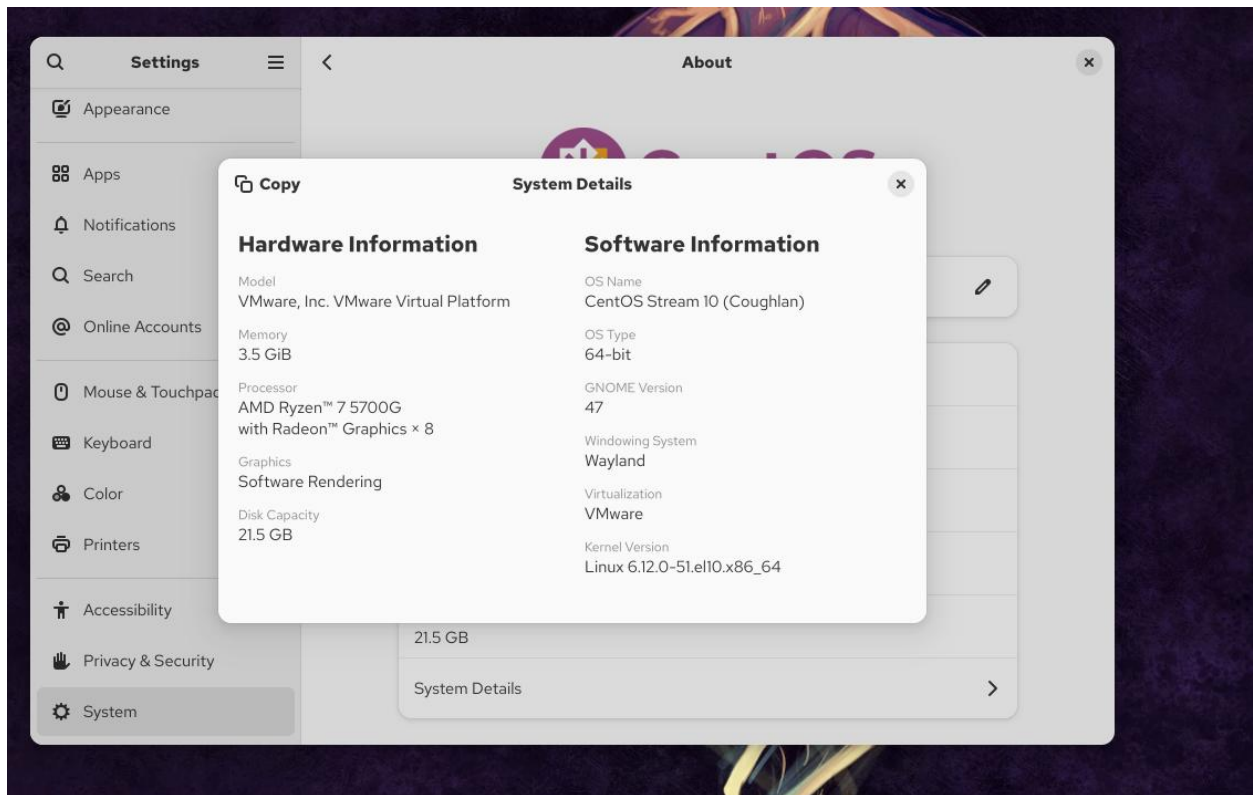

This screen will tell you everything from the last screen and a little bit more, this includes Kernel Version, Windowing System, GNOME Version, and virtualization.

Close out of settings and now CentOS is ready!